


Mango tile, glass and more

Luxury Vinyl Floor SPC

Mango Luxury Vinyl Floor SPC

UNILIN

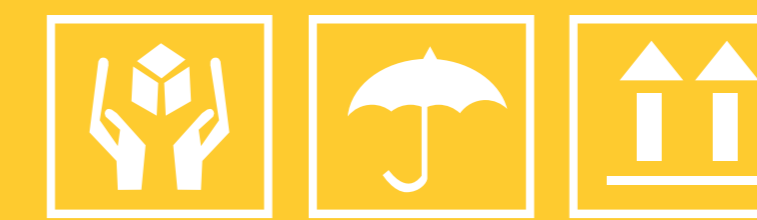

Size: 1220x182x6.5-10pcs
48x1-1/2x1/4in
15.42sqf/carton



100% Water Proof
Strong Scratch Resistant (Pet Friendly)
0% Formaldehyde (FORMALDEHYDE FREE)
Seamless Stitching
"EZ" Installation

Size: 1220x182x6.5-10pcs
48x1-1/2x1/4in
15.42sqf/carton



UNILIN

Mango Luxury Vinyl Floor SPC

S70-1

BASIC INSTALLATION GUIDE

Please refer to this guide for installation. We always recommend that you use professional installers for our products as incorrect installation or preparation of the subfloor would void warranty. Installation should be in accordance with Australian Standards – AS 1884 – 2012 Floor Coverings – Resilient Sheet and Tiles – Installation Practices.

PRIOR TO LAYING

• Prior to installation the flooring should be removed out of the boxes and stacked in piles not greater than 5 boxes high 24 hours before installation and acclimatised within a set temperature between 65°F(18°C) and 85°F (28°C). Do not attempt to install flooring outside of the recommended temperature range. • Check for any imperfections in the floor that may be present during and after the installation.

SUBFLOOR PREPARATION


• Engineered Click Lock Flooring can float over existing hard level surfaces such as timber, concrete, existing vinyl and even ceramic tiles. It is important to note that all substrates need to be level before laying the flooring. • Check for any imperfections in the floor that may be present during and after the installation.

• Any uneven surfaces will need to be levelled with levelling compounds. • If you are unsure of the subfloor preparation, please talk to a professional for the best advice for your subfloor.

INSTALLATION TOOLS

- Stanley Knife
- Straight Edge
- Tape Measure
- Marking Pencil
- Hammer and tapping block
- Chalk Line
- Pull Bar (Optional but Advantageous)
- Table Saw, Jig Saw & Miter Saw (Optional)
- Safety Glasses
- Dust Mask
- Hammer and tapping block
- Safety Gloves


STEP 1

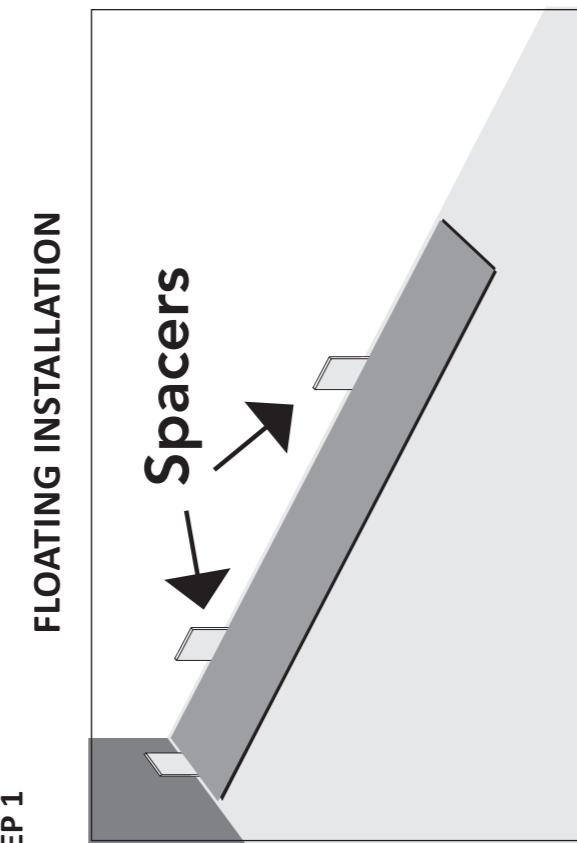

• Start installing parallel to the longest straightest wall normally an exterior wall. Install the flooring pieces left to right. The groove side of the plank should be facing away from the starting wall.


• Lay the second plank in the second row, offsetting the plank by the distance of the length and width of the floor. You may need to leave more space between the planks on the overall span as well as using expansion joints for long distances.

STEP 2

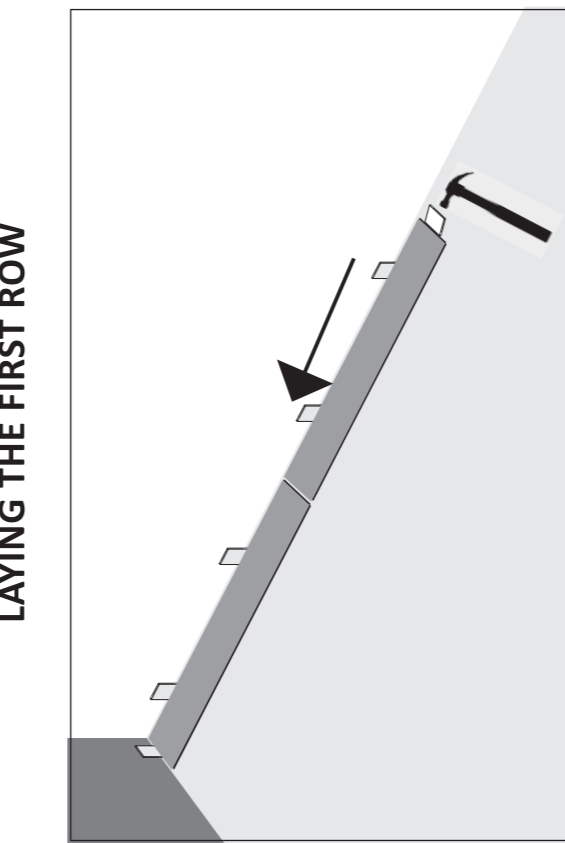

• After laying the first plank, lay the second plank in position and tap it into the groove of the first plank. Use a tapping block so you don't damage the boards with the hammer. Continue laying the boards this way until you reach the other wall.


STEP 3

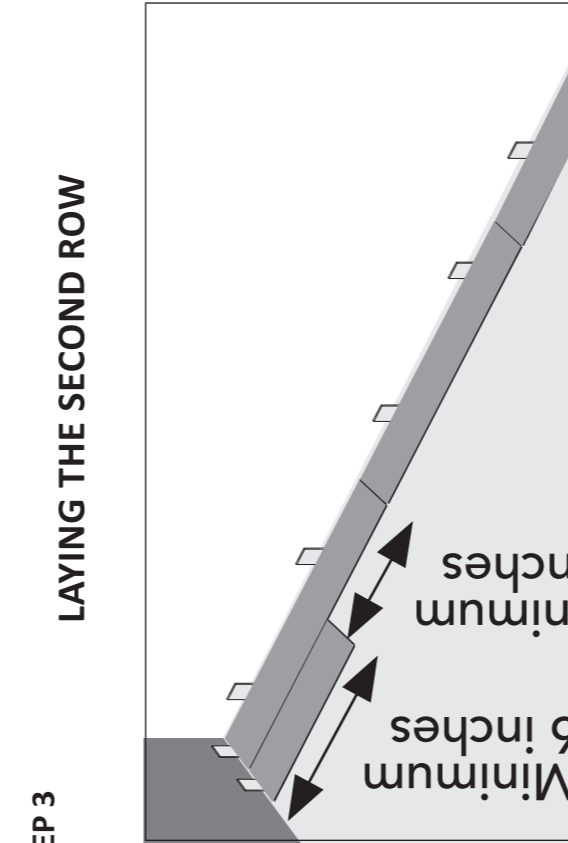

• To start the second row, install the first plank, ensure the plank is at least 8 inches longer or shorter than the first board in the previous row. There should be a minimum of 8 inch stagger between any one joint and the next joint in the row. • Measure the length of the plank to be cut or trim the plank to be at least 6 inches long.


• Next, install the second plank in the second row by inserting the tongue side into the groove first, then pressing the board down, locking it into the groove. • Use a tapping block to tap the plank into the groove and hammer the plank into the previous board.

STEP 4

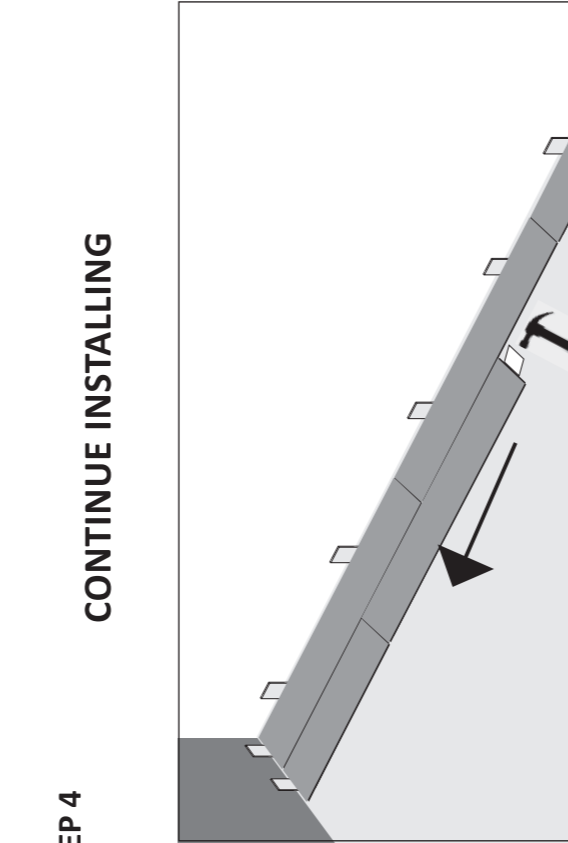


• Continue installing rows, working left to right and adding additional planks in each row while maintaining a minimum 8-inch stagger between adjacent row joints.

STEP 5

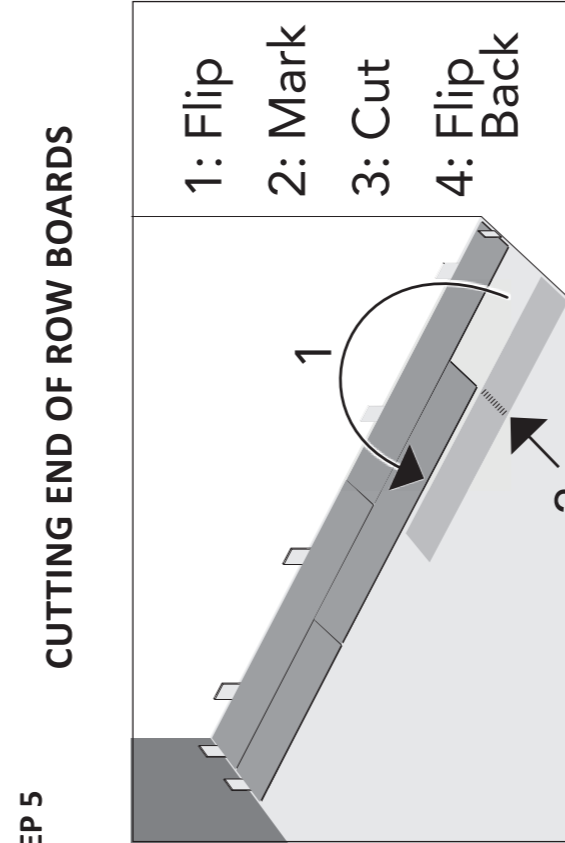

• The last board in each row should be fit with a 1/8" gap, still maintaining a 5mm - 2mm expansion gap at the wall. Here's how:
1. Flip the board over (showing the groove to your left).
2. Measure the board over (showing the groove to your left).
3. Mark and cut the board using a Stanley knife or saw.
4. Then flip the board back over and it will be ready to be tapped into place.
5. Use a tapping block to tap the plank into the groove. • Measure the distance between the expansion joints to start the next row assuming it is a minimum of 6 inches long.

STEP 6

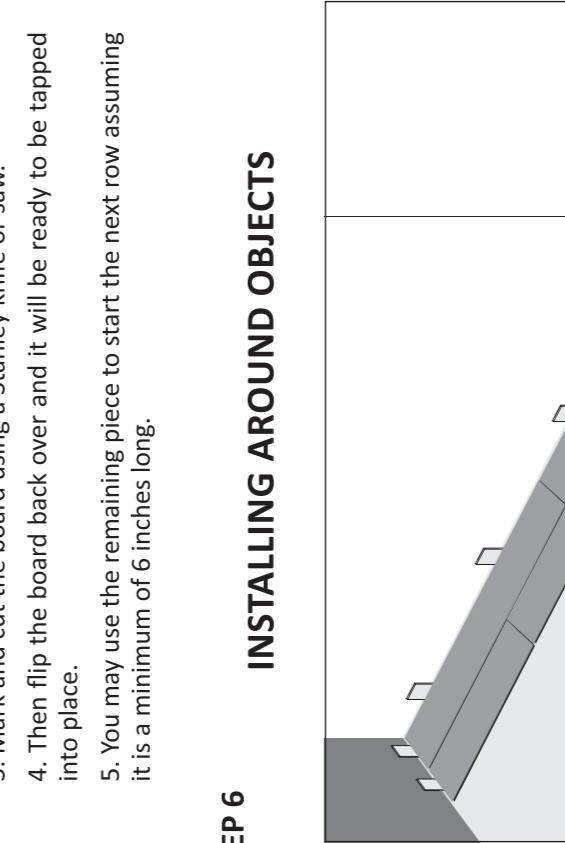

• Use a hole saw drill bit to make perfect cuts for pipes.
• Use a jumbo saw to cut the door frame for a cleaner finish.
• Use a jig saw or Stanley knife for cutting pieces around irregular shapes.

AFTER INSTALLATION / FLOOR CARE & MAINTENANCE

- Sweep up all rubbish and debris that are on the floor using a soft bristle broom.
- Any spare material left over should be stored away for future replacement if required.
- When moving furniture back on the flooring make sure to properly protect the flooring.
- Use felt protectors on furniture legs.
- Clean the floor with a pH neutral cleaner. Avoid using products such as bleach, floor wax or asphalt sealers as these may contain chemicals that can permanently stain flooring.
- Clean the floor with a pH neutral cleaner. Avoid using products such as bleach, floor wax or asphalt sealers as these may contain chemicals that can permanently stain flooring.
- Wipe up spills immediately with a damp cloth to prevent staining.
- Sweep and vacuum the floor regularly to keep your floor looking beautiful.
- Avoid long periods of sun exposure to the flooring by closing blinds and drapes on peak sunlight hours. This can cause colour fading and buckling in your floor due to extreme surface temperatures.